

## TR37(39)E-SV-DDA



- |  |  |
|--|--|
| 1. Handgrip- TRHG  | 14. Front Axle- STDS1002-1   |
| 2. Back Upholstery 17"- STDS2349BLK<br>Back Upholstery 19"- STDS2351BLK                    | 15. Front Caster- STDS3J2432   |
| 3. Back cane- STDS4S3601   | 16. Fork- STDS3J4533   |
| 4. Release Lever- STDS4S1503   | 17. Fork Stem Bearing- STDS8M4601  |
| 5. Seat Rail Guide- STDS1070   | 18. Hanger Pins (4)- STDS1069-4  |
| 6. Wheel Lock Tip- STDS4011<br>Wheel Lock Left- STDS4S092L<br>Wheel Lock Right- STDS4S092R | 19. Seat Upholstery 17"- STDS2348BLK<br>Seat Upholstery 19"- STDS2358BLK |
| 7. Tipping Sleeve- STDS4020  | 20. Dust Cap- STDS4S3606   |
| 8. Rear Axle Bearing- STDS4S3602   | 21. Arm Rest Pad- STDS4S3606   |
| 9. Hub Cap- STDS4S3603   | 22. Axle Spacer- STDS3J0951  |
| 10. Rear Axle- STDS4S3604  | 23. Slide Tube- STDS5N2210<br>Slide Tube Retainer- STDS5N2235            |
| 11. Rear Wheel- STDS4S3605   | 24. Arm Rest Left- STDSSDDAL<br>Right- STDSSDDAR                         |
| 12. Cross Frame 17"- *<br>Cross Frame 19"- *   | 25. Footrest- TR39SF-SV  |
| 13. Front Axle Bearing- STDS1011   | 26. Seat Belt- STDS850-PB  |
|  | 27. Front Axle Cap- STDS001000   |

\* Part no longer available.